

Safety Sign Locations

Read and obey all safety signs on the grader. Ensure they are kept clean and in good condition. Replace the safety signs if they are damaged, missing or illegible.

Each safety sign is identified by a part number. Replacement safety signs are available from your Champion Distributor.


 


Table of Contents

Accumulator	3-5
Circle and Moldboard	3-6
Use Handholds	3-7
Do Not Operate	3-8
Wear Seat Belt	3-9
Crush Zone	3-10
Engine Starter	3-11
Explosive Gases	3-12
Electrical System	3-13
Hot Pressurized Coolant	3-14
Rotating Fan	3-15
Oil Disc Brakes and Drum Brakes	3-17




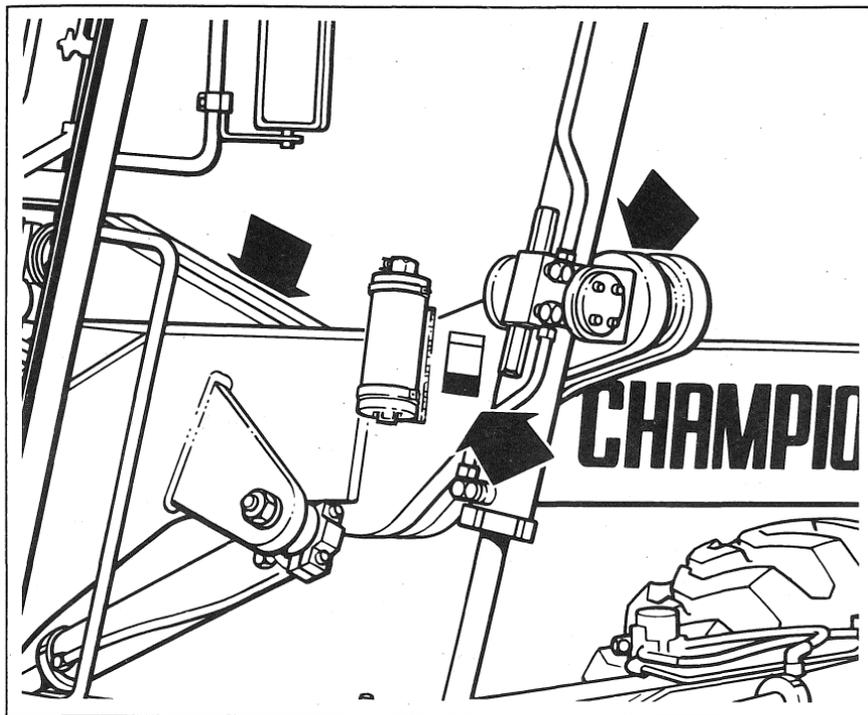


This safety sign appears on or near the accumulator used with blade lift or side shift hydraulic cylinders or oil disc brakes.


WARNING



Accumulator contents under pressure. Service by qualified personnel only.

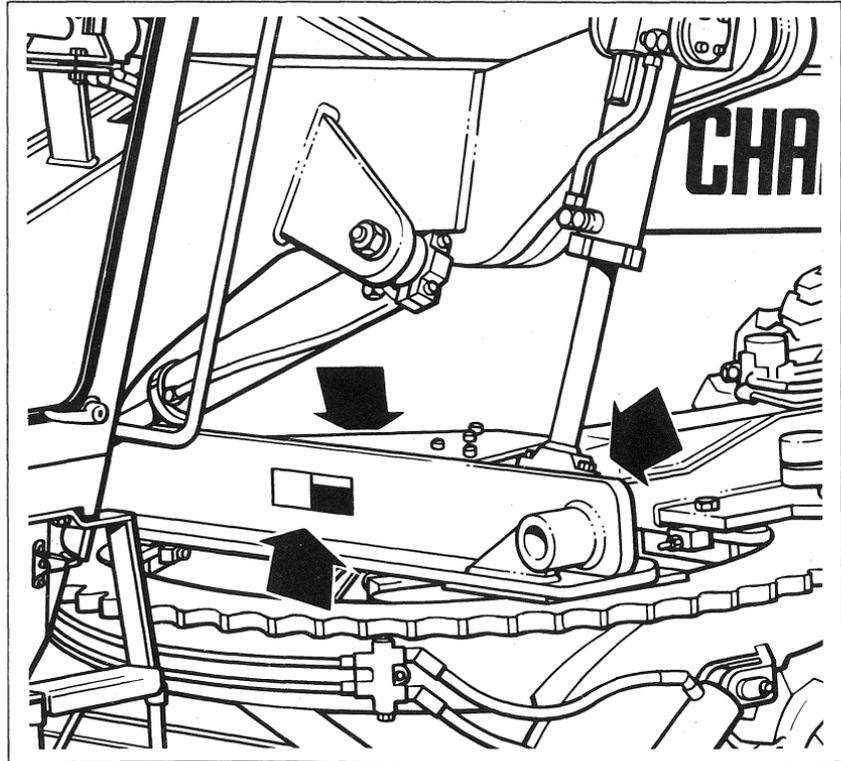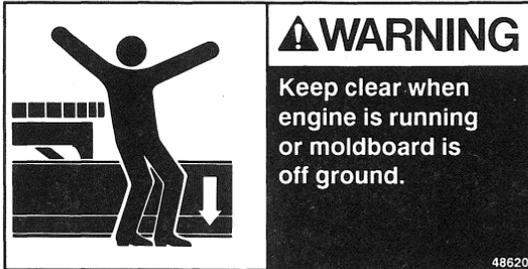

This safety sign is located on the left, right and rear faces of the drawbar.

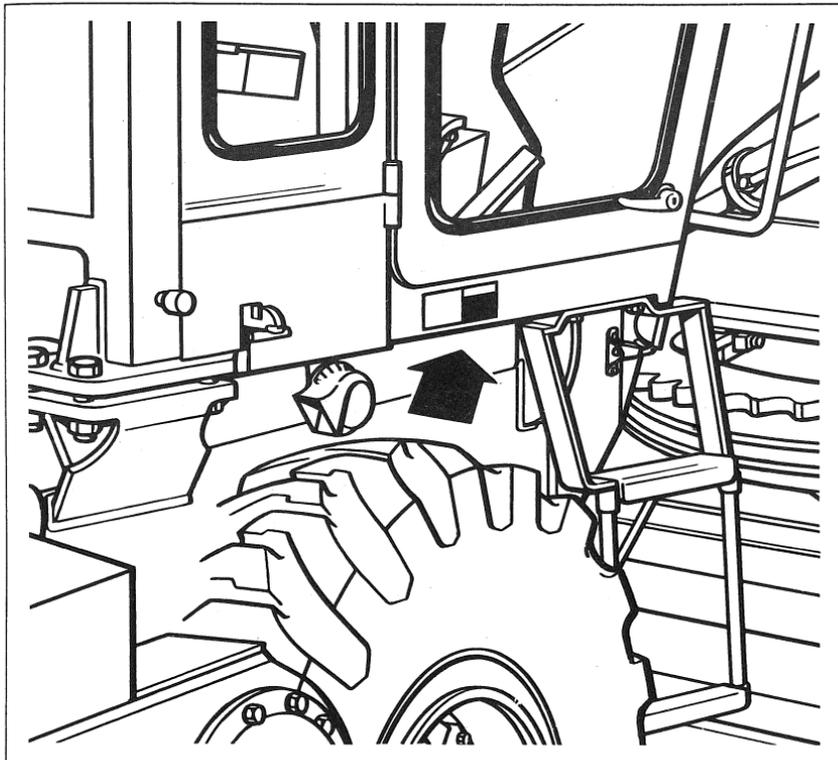


SAFETY INSTRUCTIONS

Use handholds and steps. Maintain 3 points of support.

48621

This safety sign is located on both sides of the cab.

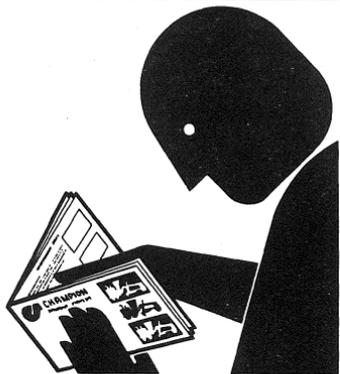
! WARNING

Do not operate this machine unless you have read and understood the instructions and warnings in the Champion Operator's Manual and the CIMA Grader Safety Manual.


Failure to follow the instructions or heed the warnings could result in injury or death. Proper care is your responsibility.

Contact your distributor or Champion for replacement manuals and decals.

48630

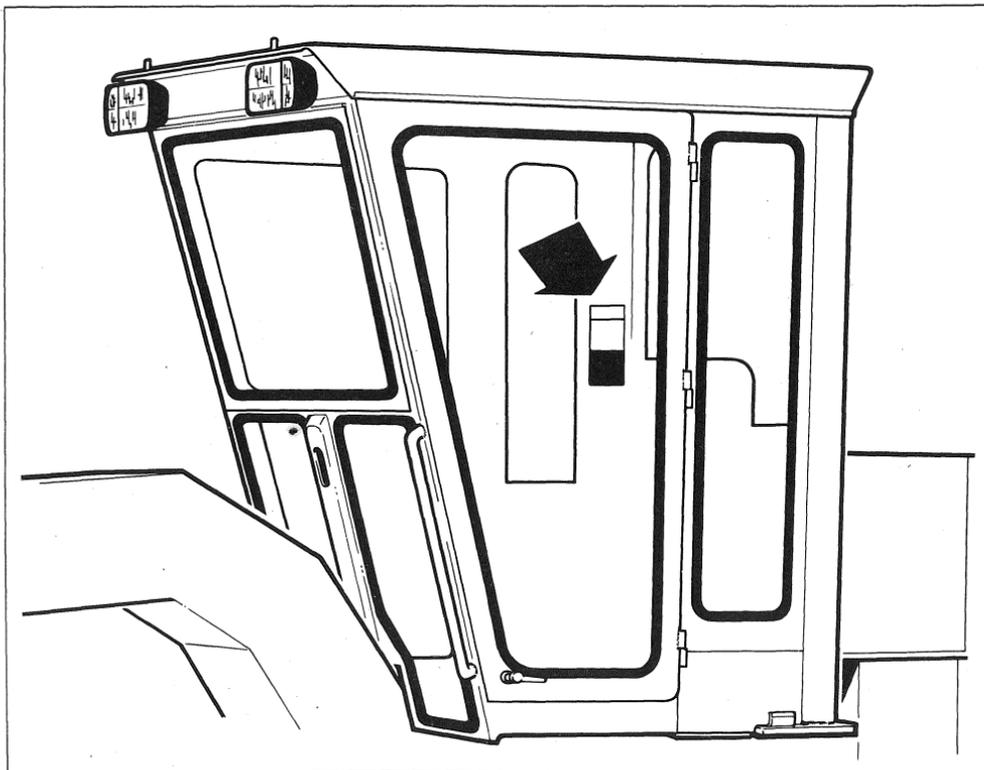


This safety sign is located on the right-hand rear cab post.

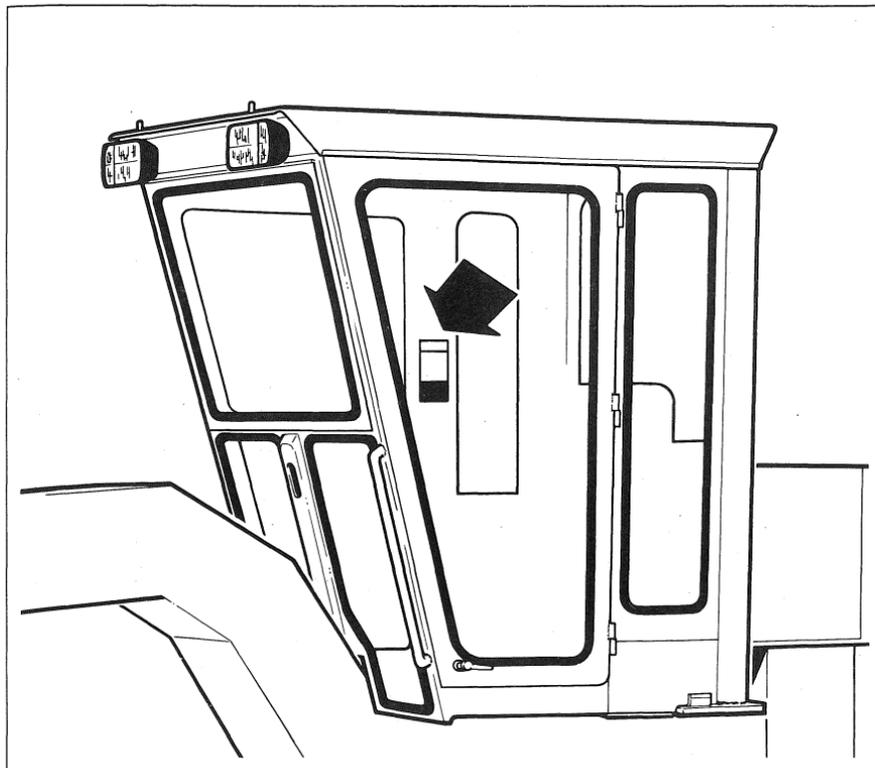


This safety sign is located on the auxilliary switch panel, on the right-hand door post.


! WARNING

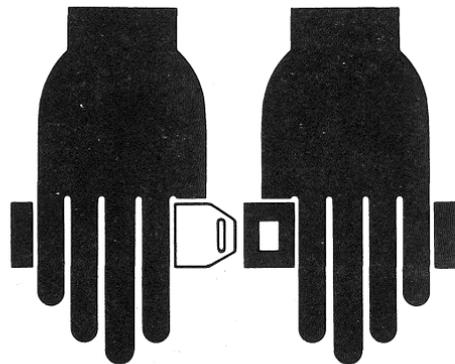

**Wear seat belt when
operating the grader.**

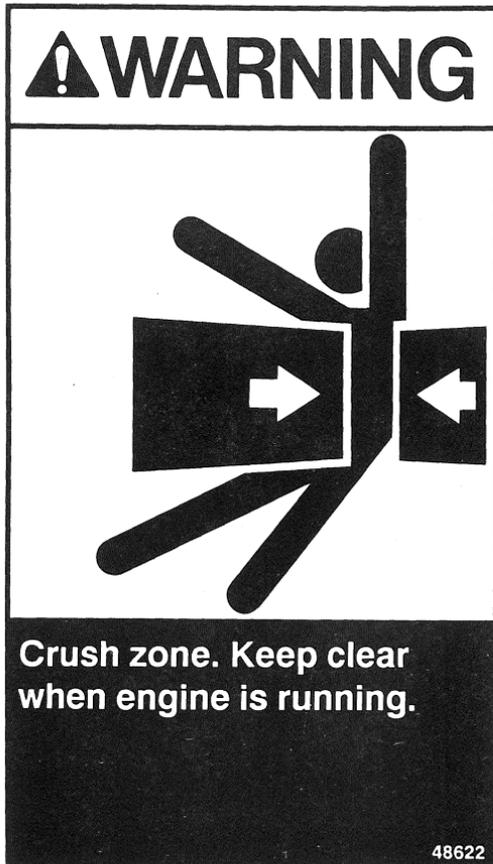

This safety sign is located on each side of the cab.

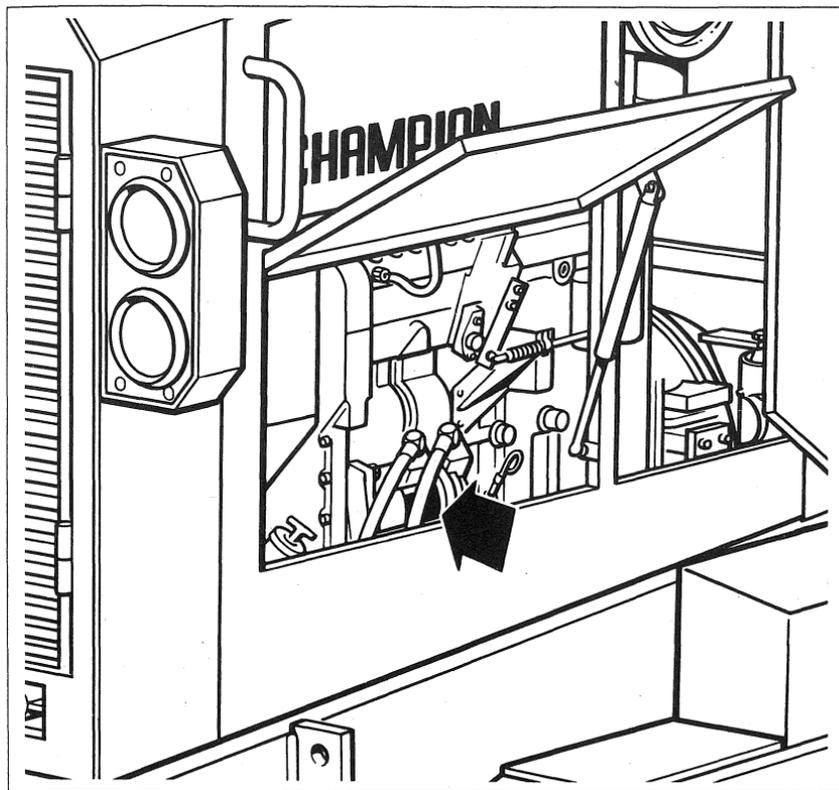

This safety sign is located on or near the engine starter.




⚠ WARNING

Never short across starter terminals. Grader could move unexpectedly. See Operator's Manual.

48624



This safety sign is located inside each battery box.


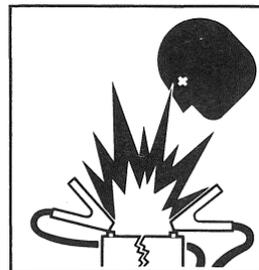


⚠ WARNING


Equipped with 12/24 volt start system. Do not jump start. See Operator's Manual.

48623

Graders equipped with the optional 12/24 volt electrical system have this safety sign located in each battery box.

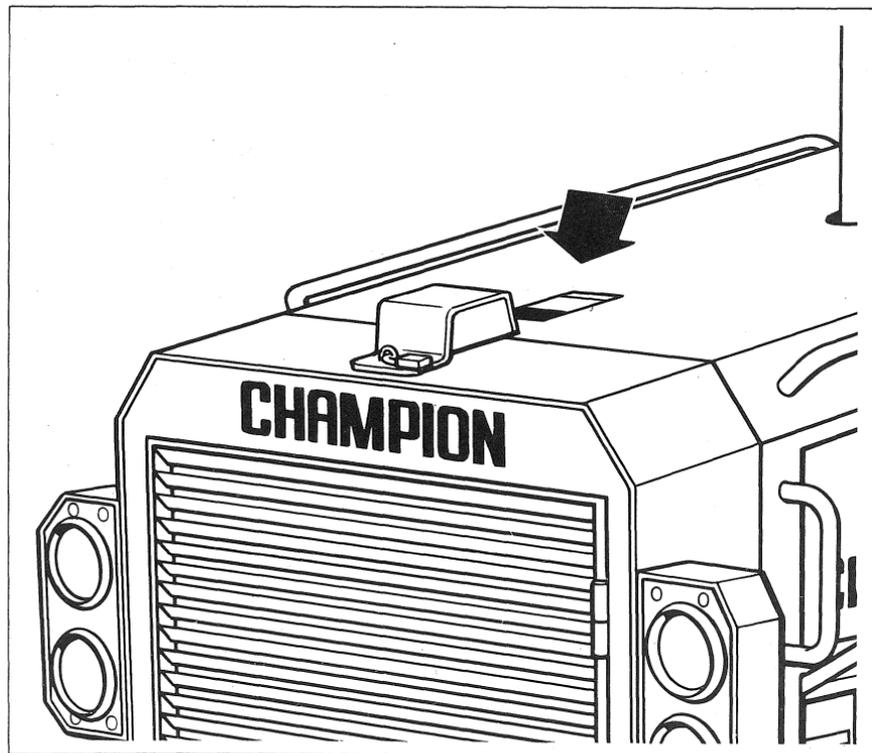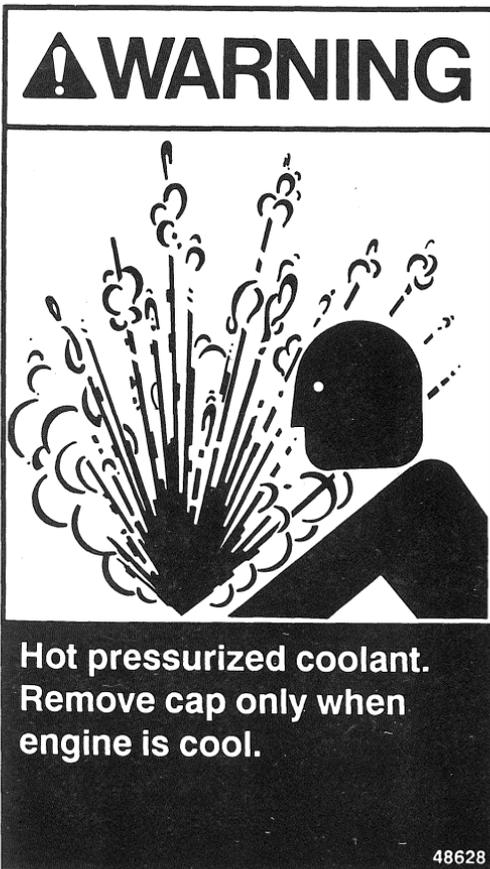


This safety sign is located on the top of the engine hood.

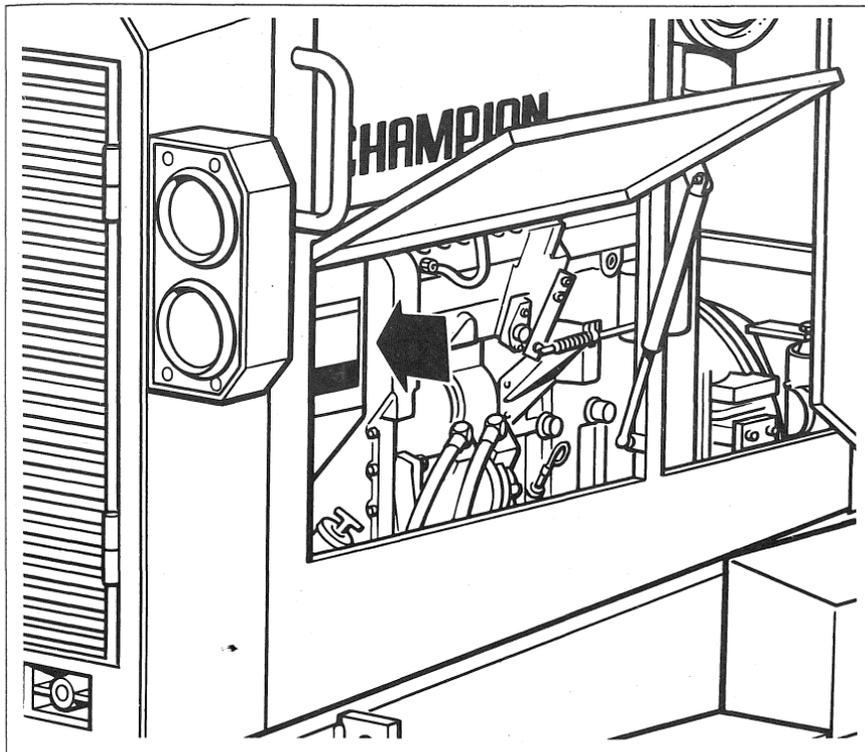

This safety sign is located on both sides of the fan shroud. On some models it is located on the frame.

⚠ WARNING

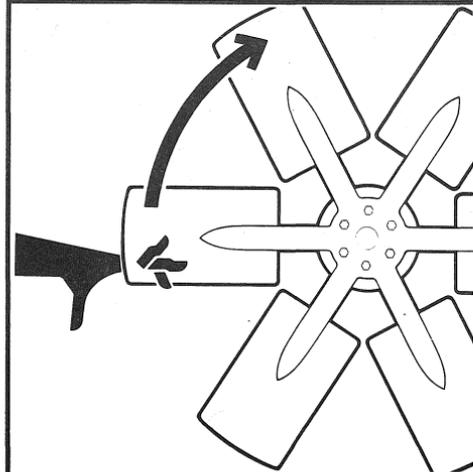

**Rotating fan, driveshaft
and belts. Keep hands away
when engine is running.**

⚠ WARNING


Use only petroleum base fluid in the brake reservoir. Other liquids may cause brake failure. Severe personal injury or death could result. See Operator's Manual for fluid options.

58441

This warning only applies to graders equipped with OIL DISC BRAKES.



This safety sign is located on the rear right-hand side of the cab.

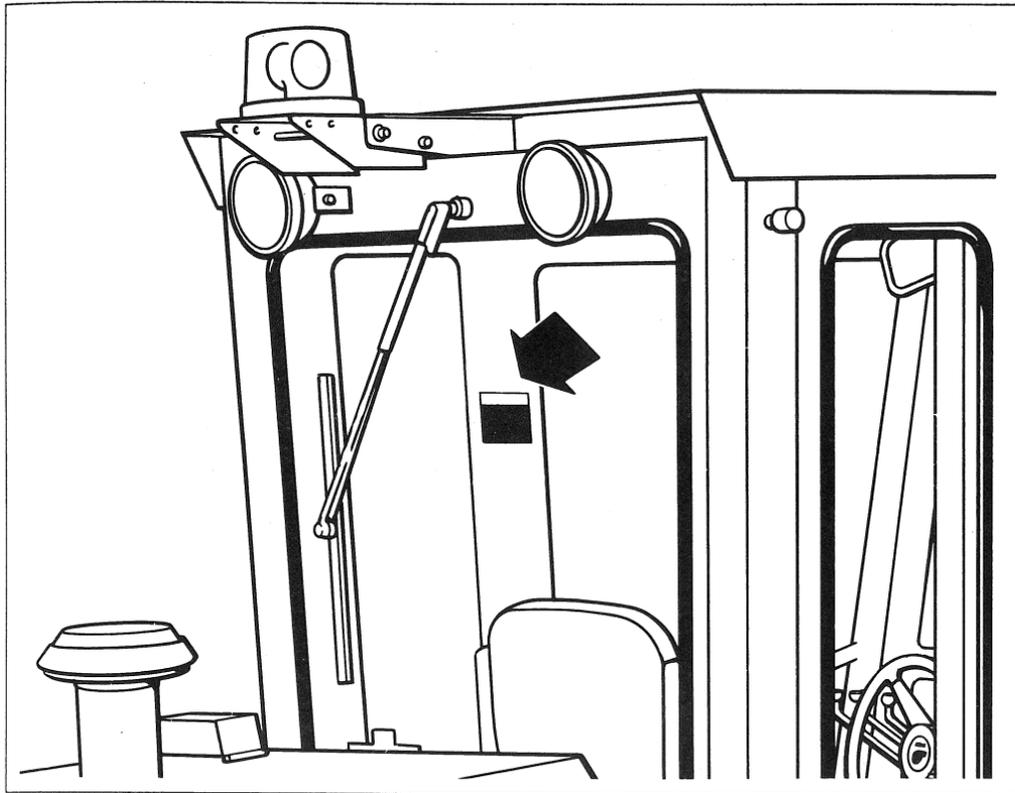

One of these safety signs is located on the left-hand door post.

SAFETY INSTRUCTIONS

This vehicle is equipped with **OIL DISC BRAKES**. See Lubrication instructions for important service information.

58616

SAFETY INSTRUCTIONS

This vehicle is equipped with **DRUM BRAKES**. See Lubrication instructions for important service information.

58619

