10-24 25-99 100+ Item # Description 1-9

FME to BNC Interseries Coaxial Adapters - 50 and 75 Ohm - Useful in Cellular Applications

Many cellular communication devices utilize the FME connector on coaxial antenna lines. L-com offers a selection of highest quality components utilizing machined brass with nickel plated surfaces and gold plated pins.

BA8016	Coaxial Adapter, FME Male/BNC Female, 50 0hm	5.93	5.57	5.22	CALL
BA8005	Coaxial Adapter, FME Male / BNC Male, 75 0hm	4.35	4.09	3.83	CALL
BA8006	Coaxial Adapter, FME Male / 90° BNC Male, 75 Ohm	5.35	5.03	4.71	CALL

1.6/5.6 to BNC Interseries Coaxial Adapters - 50 Ohm - For Conversion to the European Standard

1.0/5.0 to BNC IIIt	erseries Coaxiai Adapters - 50 Onin - For Conversion to	ine European a	Stanuart	J	
These machined adapter the world.	s are great for converting standard BNC terminations to 1.6/5.6 term	ninations which are	e common	in other	areas of
BA9200	Coaxial Adapter, BNC Male / 1.6 / 5.6 Female Adapter	9.45	8.88	8.32	CALL
BA9201	Coaxial Adapter, BNC Female/1.6/5.6 Male Adapter	9.45	8.88	8.32	CALL
Type F Interseries (Coaxial Adapters - 50 Ohm				
BA120	Coaxial Adapter, Type F Male/BNC Female	2.42	2.27	2.13	CALL
BA121	Coaxial Adapter, Type F Male/TNC Male	2.42	2.27	2.13	CALL
BA125	Coaxial Adapter, Type F Female/BNC Male	2.42	2.27	2.13	CALL
BA127	Coaxial Adapter, Type F Female/TNC Female	2.42	2.27	2.13	CALL
BA220	Coaxial Adapter, Type F Female / BNC Female	2.42	2.27	2.13	CALL
RCA Interseries Coa	axial Adapters - 50 and 75 Ohm				
BA90	Coaxial Adapter, RCA Male/BNC Female, 50 Ohm	3.62	3.40	3.19	CALL
BA94	Coaxial Adapter, RCA Female / BNC Female, 50 Ohm	3.62	3.40	3.19	CALL
BA95	Coaxial Adapter, RCA Female / BNC Male, 50 Ohm	3.62	3.40	3.19	CALL
BA887	Coaxial Adapter, RCA Female/Type F Female, 50 Ohm	2.42	2.27	2.13	CALL
BA907	Coaxial Adapter, RCA Male/Type F Female, 75 0hm	2.15	2.02	1.89	CALL
Type N Interseries	Coaxial Adapters - 50 Ohm				
BN107	Coaxial Adapter, Type N Male/BNC Male	6.88	6.47	6.05	CALL
AXA-NMBF	Coaxial Adapter, Type N Male / BNC Female	4.20	3.86	3.53	CALL
AXA-NMSM	Coaxial Adapter, Type N Male/SMA Male	4.83	4.44	4.06	CALL
AXA-NMTF	Coaxial Adapter, Type N Male/TNC Female	4.83	4.44	4.06	CALL
AXA-NMFF	Coaxial Adapter, Type N Male/Type F Female	4.20	3.86	3.53	CALL
AXA-NMRSJ	Coaxial Adapter, Type N Male / RP-SMA Jack	5.99	5.51	5.03	CALL
AXA-NMRSP	Coaxial Adapter, Type N Male / RP-SMA Plug	5.99	5.51	5.03	CALL
AXA-NMRTJ	Coaxial Adapter, Type N Male / RP-TNC Jack	5.99	5.51	5.03	CALL
AXA-NMRTP	Coaxial Adapter, Type N Male/RP-TNC Plug	5.99	5.51	5.03	CALL
AXA-NFBF	Coaxial Adapter, Type N Female / BNC Female	3.62	3.33	3.04	CALL
AXA-NFBM	Coaxial Adapter, Type N Female/BNC Male	4.20	3.86	3.53	CALL
AXA-AMNFB	Coaxial Adapter, Type N Female Bulkhead/NMO	15.38	14.15	12.92	CALL
AXA-NFMUM	Coaxial Adapter, Type N Female/Mini-UHF Male	4.20	3.86	3.53	CALL
AXA-NFTM	Coaxial Adapter, Type N Female/TNC Male	4.20	3.86	3.53	CALL
AXA-NFRBP	Coaxial Adapter, Type N Female/RP BNC Plug	4.20	3.86	3.53	CALL
AXA-NFRSJ	Coaxial Adapter, Type N Female/RP-SMA Jack	5.99	5.51	5.03	CALL
AXA-RSJNFB	Coaxial Adapter, Type N Female Bulkhead/RP-SMA Jack	6.88	6.33	5.78	CALL
AXA-NFRSP	Coaxial Adapter, Type N Female/RP-SMA Plug	4.83	4.44	4.06	CALL
AXA-NFRTP	Coaxial Adapter, Type N Female/RP-TNC Plug	5.99	5.51	5.03	CALL
AXA-NFRTP2	Coaxial Adapter, Type N Female / RP-TNC Plug 1 Piece Design	5.99	5.51	5.03	CALL
Mini-UHF Interserie	es Coaxial Adapters - 50 Ohm				
BA881	Coaxial Adapter, Mini-UHF Female/TNC Male	6.88	6.47	6.05	CALL
BA882	Coaxial Adapter, Mini-UHF Female/BNC Male	6.88	6.47	6.05	CALL
BA883	Coaxial Adapter, Mini-UHF Male/BNC Female	6.88	6.47	6.05	CALL
BA886	Coaxial Adapter, Mini-UHF Male/TNC Female	6.88	6.47	6.05	CALL
UHF Interseries Coa	axial Adapters - 50 Ohm				
BA40	Coaxial Adapter, UHF Male/RCA Female	3.62	3.40	3.19	CALL
BA130	Coaxial Adapter, UHF Female / Type F Male	3.62	3.40	3.19	CALL
BA140	Coaxial Adapter, UHF Female / RCA Male	3.62	3.40	3.19	CALL
BA160	Coaxial Adapter, UHF Male/Type F Female	3.62	3.40	3.19	CALL
BA230	Coaxial Adapter, UHF Female / BNC Female	4.73	4.45	4.16	CALL
BA270	Coaxial Adapter, UHF Male / BNC Male	3.62	3.40	3.19	CALL
BA301	Coaxial Adapter, UHF Female/Type F Female	3.62	3.40	3.19	CALL
TNC Interseries Coa	axial Adapters - 50 Ohm				
AXA-RTJRSP	Coaxial Adapter, RP-TNC Jack/RP-SMA Plug	4.83	4.44	4.06	CALL
AXA-RTPRSJ	Coaxial Adapter, RP-TNC Plug/RP-SMA Jack	4.83	4.44	4.06	CALL
	s Coaxial Adapters - 50 Ohm			_, -,	
AXA-NFDM AXA-NMDF	Coaxial Adapter, 7/16 DIN Male/Type N Female Coaxial Adapter, 7/16 DIN Female/Type N Male	65.10 72.45	59.89 66.65	54.68 60.86	CALL
	The state of the s				





